



Furniture Care Display

Assembly Instructions





Furniture Care Display

Assembly Instructions




Watch Instruction Video:
www.phoenixamd.com/furn-display

Please note that all steps should be followed in the correct sequence in order to ensure that all supports are in place. **IMPORTANT: Avoid using strong amounts of force during assembly, as it may damage the display unit.**

This kit includes an Allen key for assembling all components. For faster assembly, we recommend using either a **T25 screwdriver** or a **power drill** with extension and **Torx T25 bit**. This will help speed up the process and make tightening the screws easier.



Parts List:

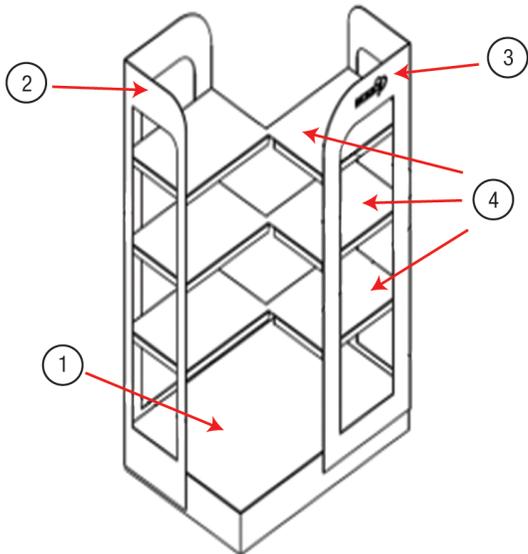


| | Part No. | Part Name: | Qty |
|---|----------|--------------------------|-----|
|  | ① | Base with Wheels | 1 |
|  | ② | Tall White Corner Panel | 1 |
|  | ③ | Short White Corner Panel | 1 |
|  | ④ | Shelf | 1 |
|  | ⑤ | Flange Nut | 10 |
|  | ⑥ | Spring Washer | 10 |
|  | ⑦ | Bolt | 18 |

Assembly Steps:




1

In a large clear area, unbox selling center components from boxes labelled **C1** and **C2**. *Note: To avoid scratches, place cardboard or a soft cloth under parts.*

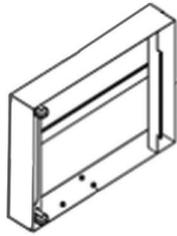


2

Place **Part 1 – Base with wheels** on its side so you can access the holes for mounting on the inside of the base.

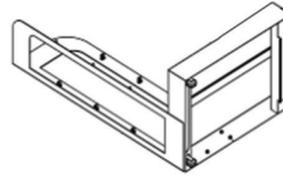

3

Position **Part 2 – Tall white corner panel** against the base, aligning the mounting points on the panel with the holes on the base.

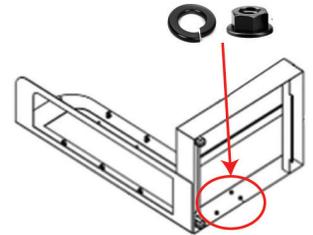


4

Place **Part 6 – Spring Washer** onto the first mounting point, followed by fastening **Part 5 – Flange Nut** onto the same mounting point.



5

Repeat Step 4 for all remaining mounting points on the tall panel. **Do not overtighten**

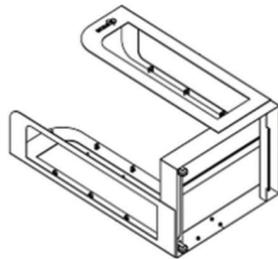


6

Position **Part 3 – Short white corner panel** against the opposite side of the base, aligning the mounting points on the panel with the holes on the base.




7

Repeat Step 4 for all mounting points on the short panel. **Do not overtighten**

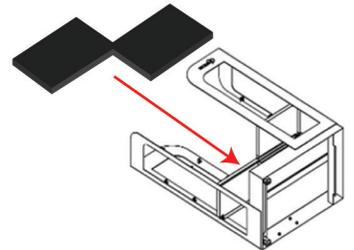


8

Position **Part 4 – Shelf**, at the lowest shelf location between the two corner panels, aligning the holes in the shelf with the holes in the panels.

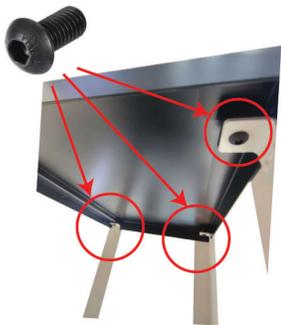


9

Insert **Part 7 – Bolt** into the first hole, and hand-tighten. Then repeat for remaining bolt holes and tightly secure all bolts in place.

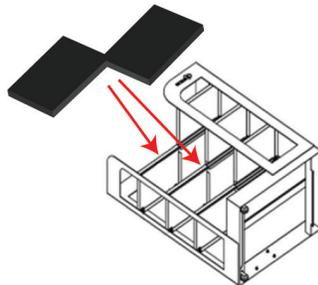

10

Repeat Steps 8 & 9 to install remaining 2 shelves.

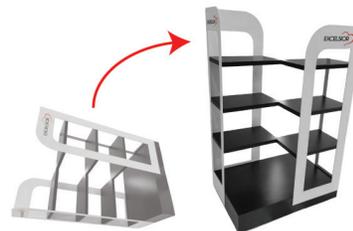

11

Lift the display into an upright position, and using the wheels on the base, move the display to its final location.



12

Merchandise with product. **Your display is now fully assembled and ready for use!**