

## **Premium Stainless Steel Hoses for Steam Dryer**

Top quality stainless steel hoses and Y connector
with exclusive 5 year warranty\*
Burst proof design
3/4" hose connections
Corrosion resistant
Certified and tested

## **Installing Your Hoses**

What You Will Need

1 Set of Color-Coded Excelsior Pür™ Premium Washing Machine Hoses: red for hot water and blue for cold water



1 Set of Excelsior Pür™ Hoses for Steam Dryers;

12-inch inlet adapter hose and 6-foot hose



8 Flat Washers (included)



1 Y-Connector (included)



1 Adjustable Plier



Hot and Cold-Water Faucets should be located within 5ft (1.5m) of hot and cold-water fill valves on washer.





## INSTALLATION

**IMPORTANT:** for indoor use only. Do not over-tighten couplings or use tape or sealants on valve when attaching to faucets or washer, as damage can result.

Follow the steps below to connect the water to your new washer:

1) Ensure your water source is turned off before beginning.



2) Insert a flat washer into each end of the hoses. Check that washers are firmly seated in couplings.



3) Using the hoses provided from the Excelsior Pür™ Premium Washing Machine Hoses, attach the 90° elbow end of the cold water (blue) hose to the cold-water inlet valve on the back of the machine; then the hot water (red) hose to the hot water inlet valve.





4) Hand tighten couplings, then use pliers to make an additional 1/4" turn clockwise. Do not over-tighten couplings, as damage can result.



5) Attach the opposite end of the hot water (red) hose to the hot water faucet.



6) Hand tighten couplings, then use pliers to make an additional 1/4" turn clockwise. Do not over-tighten couplings, as damage can result.



7) Attach the opposite end of the cold water (blue) hose to one of the two splits in the Y-connector.

If your washer is part of a set, which is not stacked, then consider the following: If the washer is on the **left**, connect the hose to the **left** split. If the washer is on the **right**, connect the hose to the **right** split.



8) Hand tighten couplings, then use pliers to make an additional 1/4" turn clockwise. Do not over-tighten couplings, as damage can result.



**9)** Insert a flat washer into each end of the steam dryer hoses. Check that washers are firmly seated in couplings.



10) Using the 6-foot hose provided in the Excelsior Pür™ Hoses for Steam Dryers, attach the 90° elbow end to the inlet valve on the back of the dryer machine.





11) Hand tighten couplings, then use pliers to make an additional 1/4" turn clockwise. Do not over-tighten couplings, as damage can result.



12) Attach the opposite end of the 6-foot Steam Kit hose to the second split in the Y-connector.


If your washer is part of a set, which is not stacked, then consider the following: If the washer is on the **left**, connect the hose to the **left** split. If the washer is on the **right**, connect the hose to the **right** split.



13) Hand tighten couplings, then use pliers to make an additional 1/4" turn clockwise. Do not over-tighten couplings, as damage can result.



14) Using the 12-inch inlet adapter hose provided in the Excelsior Pür™ Hoses for Steam Dryers, attach one end to the remaining opening in the Y-connector. 15) Hand tighten couplings, then use pliers to make an additional 1/4" turn clockwise. Do not over-tighten couplings, as damage can result.

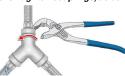

16) Attach the opposite end of the 12-inch inlet adapter hose to the coldwater faucet.



17) Hand tighten couplings, then use pliers to make an additional 1/4" turn clockwise. Do not over-tighten couplings, as damage can result.

