

What You Will Need



1 Set of Color Coded Excelsior Pür™ Premium Washing Machine Hoses: red for hot water and blue for cold water



4 Flat Washers (included)



1 Adjustable Plier



Hot and Cold Water Faucets should be located within 5ft (1.5m) of hot and cold water fill valves on washer.

Installing Your Hoses


IMPORTANT: for indoor use only. Do not over-tighten couplings or use tape or sealants on valve when attaching to faucets or washer, as damage can result.

Follow the steps below to connect the water to your new washer:

- 1) Ensure your water source is turned off before beginning.




- 2) Insert a flat washer into each end of the hoses. Check that washers are firmly seated in couplings.

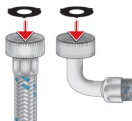

- 3) Attach the 90° elbow end of the cold water (blue) hose to the cold water inlet valve on the back of the machine; then the hot water (red) hose to the hot water inlet valve.



- 4) Hand tighten couplings, then use pliers to make an additional 1/4" turn clockwise. ***Do not over-tighten couplings, as damage can result.***

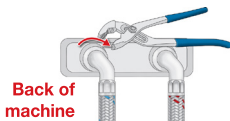

- 5) Attach opposite end of cold water (blue) hose to the cold water faucet. Attach hot water (red) hose to the hot water faucet.



- 6) Hand tighten couplings, then use pliers to make an additional 1/4" turn clockwise. ***Do not over-tighten couplings, as damage can result.***

